
## JCS Industries Inc.

Innovative Chemical Feed Solutions

The JCS Industries Model 420-Cylinder Mounted Regulator is designed for years of safe and reliable service.

This robust design includes a machined front and back body, internal (non-latching) switching mechanism, internal pressure relief vent and a non-metallic inlet valve assembly. The Model 420-C Vacuum Regulator is direct cylinder mounted or can be installed on multiple cylinder pressure headers.

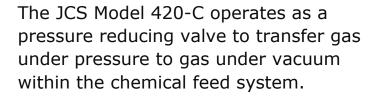

Installed between the cylinder of the chosen gas and the Chemical Feeder Model 4200, the Model 420 will switch from one cylinder to the next one in line as soon as the gas in the first cylinder is depleted. An internal switchover valve is automatically activated in the event of gas supply failure; the reduction of the vacuum will isolate the regulator diaphragm cavity from pressurized pipe work.



- -Rate Range: 1 to 500 PPD
- -Shuts off the gas supply in the event of vacuum failure
- -Durable components
- -Provides an indication of gas supply status
- -Does not require an auxiliary pressure reducing valve
- -Suitable for chlorine, sulfur dioxide or ammonia gas
- -Unit includes an internal switchover valve
- -Cylinder or yoke mounting capability
- -Low part count construction for low maintenance

Range	1 to 500 Lbs. Per Day
Chemical of Use	CI2, SO2, NH3
Mounting Assemblies	150 lb. Cylinder or Yoke
Internal Switchover Valve	Yes
Connections	Vacuum to injector - 0.375" FNTP
	Vent to outside - 0.375" FNPT
Overal Dimensions	4.625" L x 5.125" W x 5.125" H
Weight	6 Lbs.

## **Characteristics**

JCS Industries 420-C Vacuum Regulator regulates the supply of pressurized chlorine, sulfur dioxide or ammonia gas into a vacuum dosing system at a rate of up to 500PPD.

The regulator consists of: a sealed cavity, diaphragm with opposing return spring, gas inlet valve, vacuum outlet, high pressure vent and vacuum status indicator.

In the event of high vacuum caused by gas supply failure, the regulator will seal off the vacuum from the supply.

In the event of vacuum failure, the return spring safely shuts off the gas supply inlet valve. If gas pressure occurs in the vacuum cavity, it will be vented safely to an external atmosphere.